

# MURPHY DESK Installation guide



## SECURE DESK CABINET TO WALL

SECURE THE CABINET TO THE WALL THROUGH THE BACK OF THE TOP INTO A WALL STUD. USING THE 3 1/2" LONG WOOD SCREW PROVIDED. YOUR CABINET, WHEN PROFESSIONALLY INSTALLED, COULD INSTEAD BE SECURED TO THE MURPHY WALL BED..




## ATTACH THE SAFETY CHAIN

*YOUR DESK MAY ARRIVE WITH THIS INSTALLED*

MEASURE 18" DOWN FROM THE TOP ON THE DESK CABINET SIDE OPPOSITE FROM THE HANDLES.

ATTACH THE PLATE WITH THE CHAIN BY SCREWING IT IN USING THE TWO SCREWS PROVIDED.

ATTACH THE RECEIVING PLATE 2" DOWN FROM THE TOP CORNER OF THE DESK SUPPORT LEG..

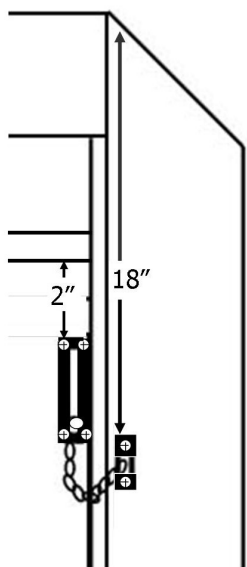

## SAFE OPERATION

**DO NOT LET ANYONE USE THIS DESK WITHOUT INSTRUCTING THEM ON HOW TO SAFELY OPERATE IT.**

**OPEN THE DESK-** UN LATCH THE SAFETY CHAIN. HOLD THE DESK IN THE CLOSED POSITION WITH ONE HAND. PRESS THE BUTTON RELEASE WHILE HOLDING THE DESKTOP, CAREFULLY LOWER IT TO THE GROUND MAKING SURE THE LEG IS POSITIONED STRAIGHT DOWN TO SUPPORT THE DESKTOP.

**CLOSE THE DESK-** LIFT THE DESKTOP AND WITH ONE HAND HOLD IT IN THE UPRIGHT CLOSED POSITION INSIDE THE CABINET. USING YOUR OTHER HAND PUSH THE BUTTON LOCK TO LATCH IT INTO PLACE. NEXT SLIDE THE SAFETY CHAIN INTO PLACE. WHEN YOU PULL ON THE HANDLE YOU WILL KNOW THAT THE LATCH IS HOLDING THE DESK IN PLACE.

**CAUTION- FAILURE TO FOLLOW THESE INSTRUCTIONS, CAN RESULT IN SERIOUS INJURY.**