


WARNING! ALL PISTONS CONTAIN STORED ENERGY. FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN DAMAGE TO THE PRODUCT, PERSONAL INJURY OR DEATH.. PLEASE CALL 916-607-7728 WITH ANY QUESTIONS.




www.wallbedscompany.com

6 ATTACH CABINET TO WALL Be sure that the cabinet is perfectly square on the wall. Use the (6) 3/12" wood screws to attach the cabinet into 3 wood studs in the wall through the back of the top.

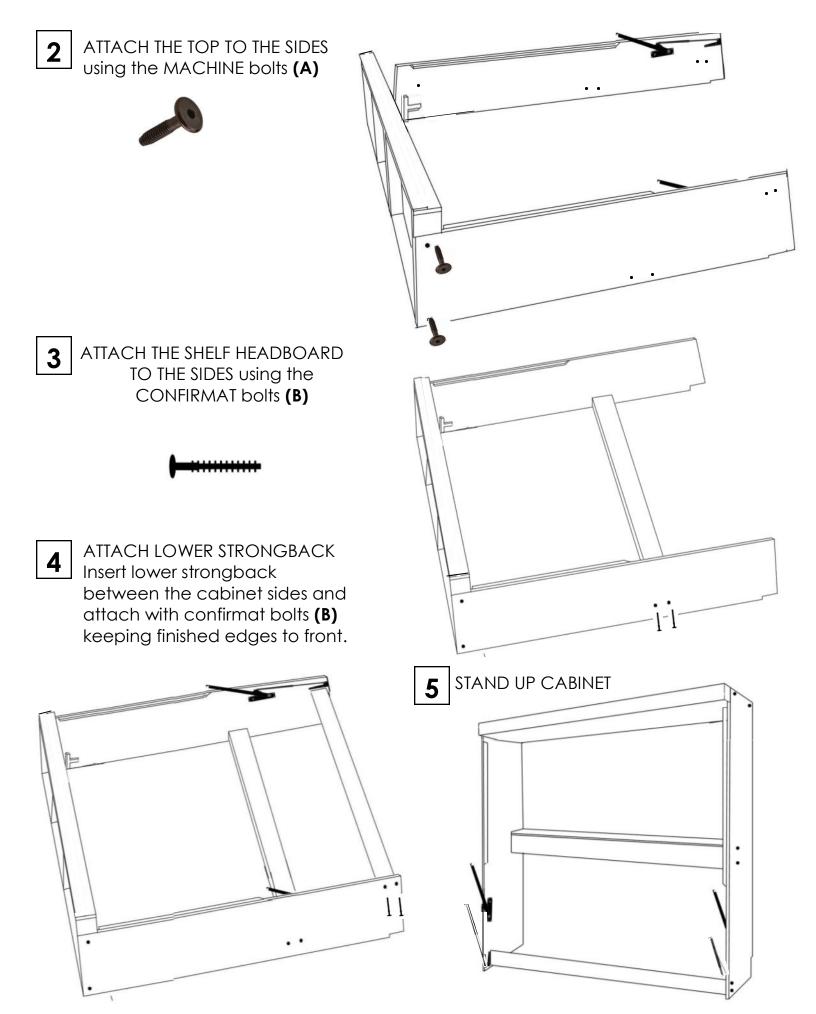


6 -WOOD SCREWS -3 1/2"

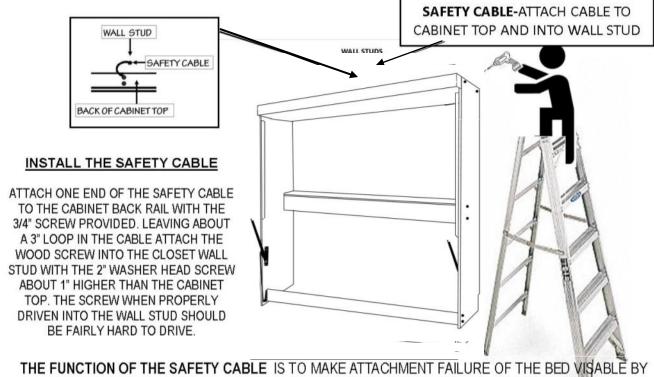


THE FUNCTION OF THE SAFETY CABLE IS TO MAKE ATTACHMENT FAILURE OF THE BED VISABLE BY ALLOWING THE BED TO COME AWAY FROM THE WALL 2 TO 3 INCHES. WHEN YOU SEE THIS CONDITION DO NOT OPEN THE BED! YOU MUST INVESTIGATE WHAT IS WRONG AND CORRECT IT!

TRAY ASSEMBLY Mount tray ends to the mattress tray. The tray ends are left and rights so when installing be sure each tray end is mounted to the tray with confirmat bolts so that the thicker lidded side of the bushing is facing toward the tray and not away. If installed correctly then these will be facing each other.

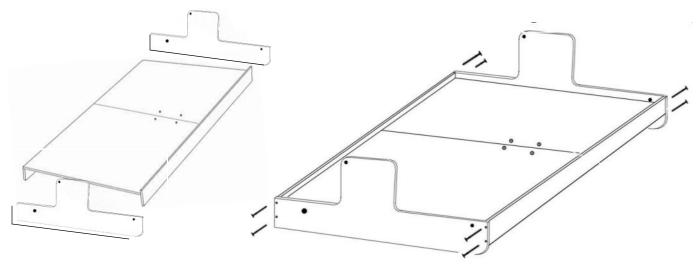

ATTACH DESK TO TRAY

Place desk vertically on the mattress tray and attach with link pivot plates using barrel and 6 1/2mm machine screws to plate. Insert in holes, attach remaining screws, then tighten all.

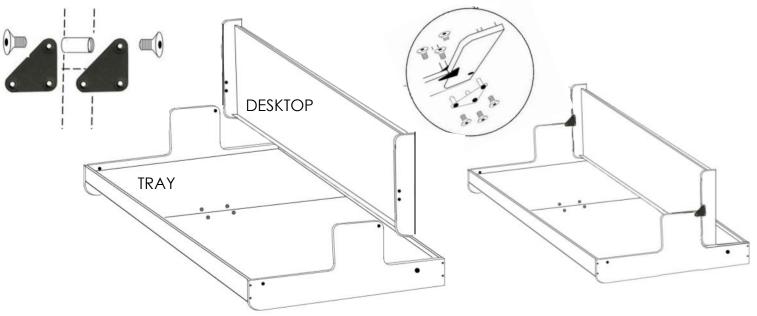



8


FOLD DOWN DESK


Fold desk horizontally over the finished bottom of the mattress tray.

10 Attach bearer assembly

At each desk end, bolt bearer through wood through the washer into the nylon lock nut. Tighten firmly, but leave enough slack to slightly adjust the position later.


DO NOT APPLY SCREWS INTO HOLES ON THE FLANGE NOW

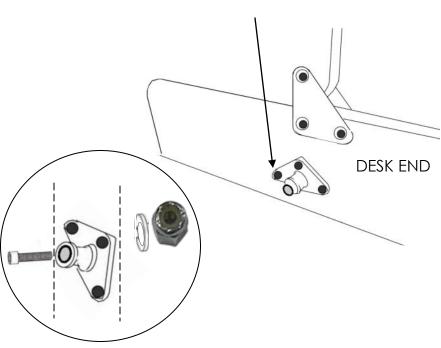

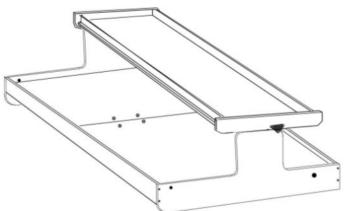

11 INSTALL LOCKS

Attach black locking assembly to the inside on the bed end panels in holes provided, using screw. Retract the pins for assembly clearance.

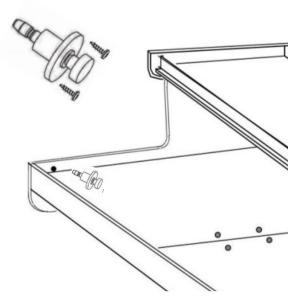


www.wallbedscompany.com


sales@wallbedscompany.com

5

12|


POSITION DESK TRAY- Roll the entire assembly over so the desk bottom is on the floor and the mattress bed tray is facing up. Desk should be resting on the floor. Finished edge facing into the room.

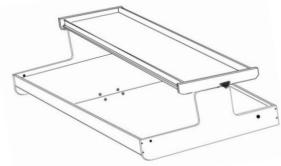

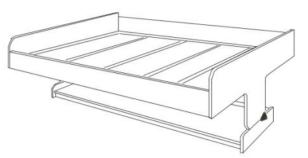


ATTACHING DESK WITH TRAY INTO CABINET 13

Slide the DESK/TRAY into the standing cabinet.

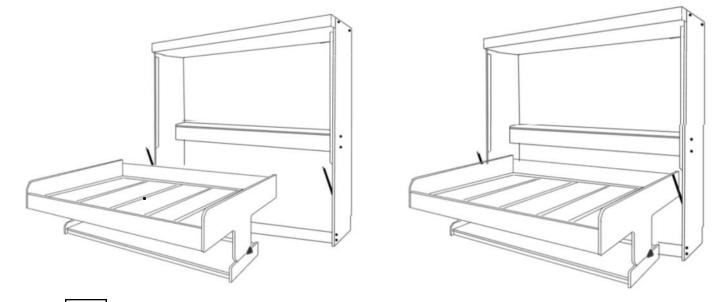

INSERT TRUNION BOLT Line up the trunion hole in the bed tray with the connecting 14 threaded hole at the upper end of the lever arm bracket mounted to the cabinet side panel. From behind the unit, slide the trunion sleeve and bolt through the hole in the lever arm bracket. Once both trunions are in place, use the 10mm allen wrench to firmly tighten the trunion bolts.



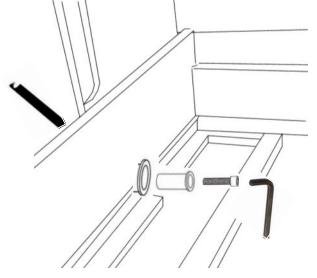



CONNECT THE PISTON

TO THE ARM Raise and LOCK the bed in the UP or CLOSED position. . Insert the barrel piston arm connector into the hole at the piston end. Insert the piston into the second valley as shown here.






16

CONNECT THE ARM TO THE DESK Raise and LOCK the bed in the UP or CLOSED position. Hold the desk wing and pull the lever arm down and around the bearer post, then release to connect gently with the bearer. You will be compressing the piston as you pull the arm down so it will require force.

Verify that the desk is sitting fully up the side panel. If it is not, slightly loosen the bearer bolts allowing it to do so, then retighten securely.

Apply screws to each of the three flange holes of the bearer fittings on each end of the desk. One lever arm at a time may be released for screw access.

17



ATTACH HANDLES

In the center of your bed are 4 holes to secure the decorative handles with the screws and washers provided.

INSTALL THE CARDBOARD LINER

Inside the mattress cavity are cross ribs that allow air to circulate around your mattress to prevent mold and mildew. Lay the cardboard liner over the ribs and screw in down in place using wood screws.

18 INSERT MATTRESS

Strap and buckle your mattress into the mattress tray and tuck excess strapping under one side.





WARNING! ALL PISTONS CONTAIN STORED ENERGY. FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN DAMAGE TO THE PRODUCT, PERSONAL INJURY OR DEATH.. PLEASE CALL 916-607-7728 WITH ANY QUESTIONS.

8